



Data Transfer for Series II/III Controllers


From main Quick-Key software screen click on the Series II/III controller icon. 


Next, select from the list of all Series II/III controllers which device you wish to transfer data to/from.

Make sure the selected device is connected to the PC/Laptop by appropriate interface option (UDS-10 or Link PC interface cable)

After making sure the Series II/III controller is connected, click on the icon designated as 'Series II/III Controller Transfer Wizard'  at the bottom of the screen.

The Transfer Wizard screen should now appear. Select 'Perform Transfers' from the list of what to do. Click  at the bottom of the screen.

From the next screen that appears, select under the 'Transfer' section the selection for the controller you wish to perform the transfer with. Below that, in the 'Transfer Mode' section select the proper mode for the function you wish to perform. Click  to continue.

From the next screen that appears, under 'Type of Connection' select the connection type that matches the configuration of your data connection to the device. After the connection type has been selected, select when you would like to perform the transfer. You may either perform the transfer now or schedule it for a later date and time. After completing the screen of the Transfer Wizard, Click 

If you chose to perform the transfer 'Now', the Transfer Wizard will then read/write data from your Series II/III controller.

If you chose to set a future date and time to perform the transfer, the Transfer Wizard will then display a waiting message.

After Transfer Wizard has completed it's tasks, a summery indicating whether or not the transfer was successful will then be displayed.

After summery is complete, Click  and you will be returned to the list of all Series II/III controllers.