
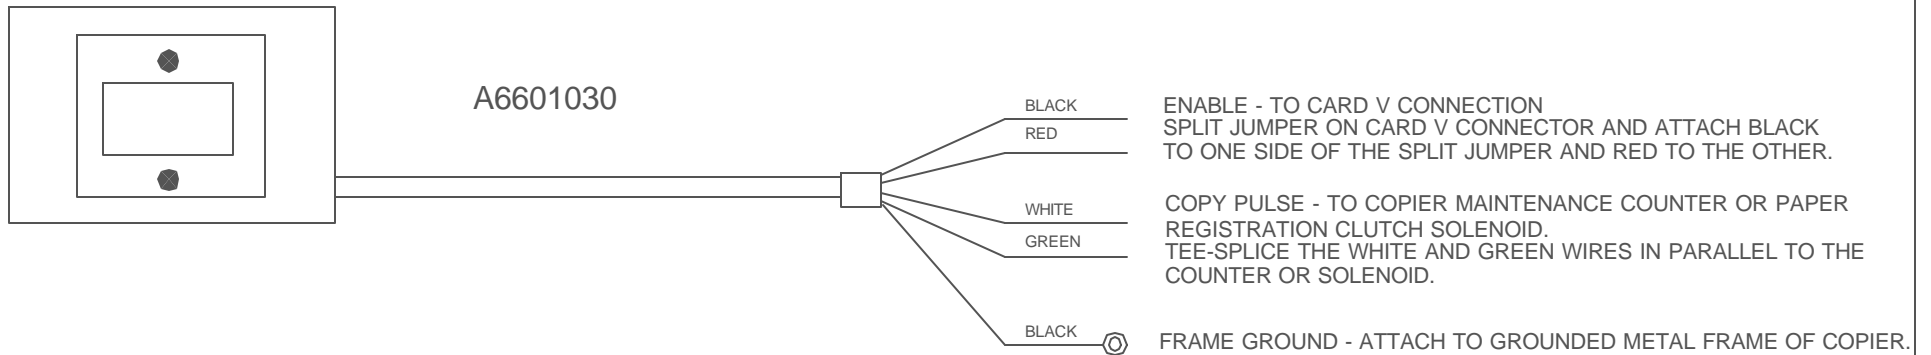
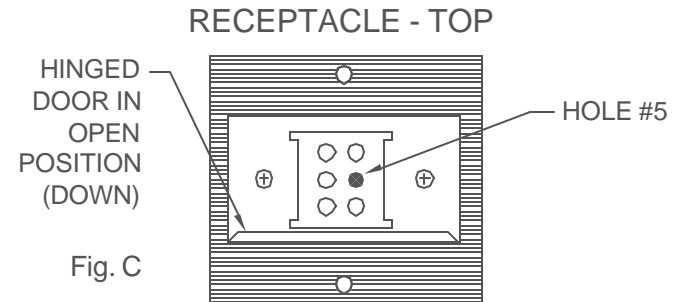


HECON TO CANON COPIER (VIA CARD V INTERFACE)

A1 601 105 KIT FOR A6 601 030 EXT. RECEPTACLE TO CANON COPIERS W/CARD V INTERFACE

1. USE THE WHITE & GREEN WIRES AND THE TWO SPLICE CONNECTORS, SUPPLIED WITH KIT A1601105, TO EXTEND THE COPY PULSE WIRES OF THE A6601030 EXTERNAL RECEPTACLE, IF NEEDED.
2. TO ADD ADDITIONAL POLARIZATION TO THE RECEPTACLE IT WILL BE NECESSARY TO BLOCK HOLE #5 WITH THE NYLON PIN, SUPPLIED WITH KIT A1601105. FIND THE TOP & BOTTOM OF THE RECEPTACLE BY USING Fig. C. THE HINGED PART OF THE DOOR WILL BE AT THE BOTTOM. INSERT THE SMALL END OF THE NYLON PIN INTO HOLE #5 AS SHOWN & PUSH INTO PLACE.
3. IF THE KEY COUNTERS DO NOT HAVE PIN #5 REMOVED, DO THE FOLLOWING. USE Fig. A & Fig. B TO DETERMINE THE BOTTOM EDGE & WHICH PIN IS PIN #5. USE NEEDLE NOSE PLIERS TO REMOVE/BREAK OFF PIN #5. PLACE THE JAWS OF THE PLIERS OVER THE ENTIRE PIN AND GENTLY ROCK THE PIN BACK & FORTH. BE CAREFUL NOT TO BEND ANY OTHER PINS. THE PIN SHOULD BREAK OFF AT ITS BASE & BE DISCARDED.

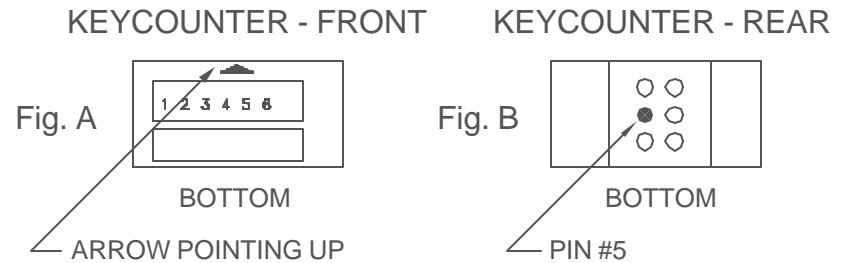

HECON TO CANON COPIER (VIA CARD V INTERFACE)

